


9007 Drain Tube Assembly and Installation Instructions

STEP 1: Assemble drain tubes

Assemble drain tube, drain fitting and foam washer in the order shown below. The drain tube should slide about 3/4" onto the drain fitting (it may help to twist fitting while putting on the drain tube).

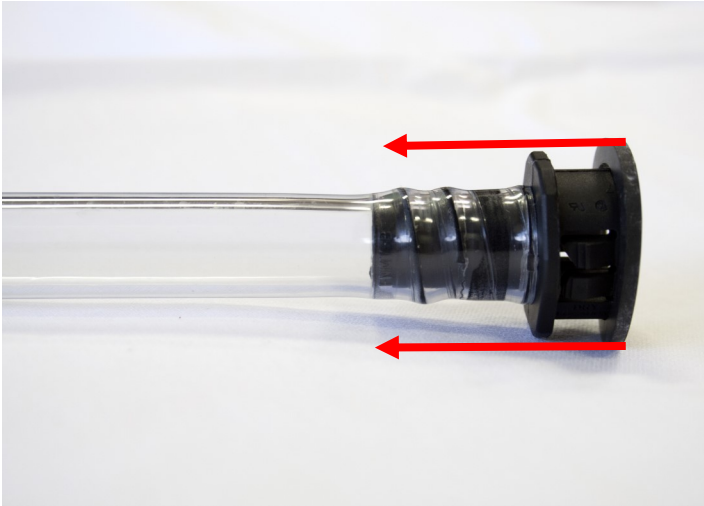

Assembly of Drain Tube and Fitting

STEP 2: Install assembled drain tubes

The assembled units can now be snapped into the holes on the bottom of the canister.

The fitting should lock into place; test by pulling down on the fitting, it should not pull out of canister.



Drain Tube Assembly Insertion